

ROOMETTES

SIGNAL BREWERY #01-103-01 AND COMBO R4370

INSTRUCTIONS

1. REMOVE THE MAIN FLOOR FROM THE CARDSTOCK SHEET WITH A SHARP HOBBY KNIFE. **DO NOT CUT THE DOTTED LINES.** THEY ARE FOR REQUIRED FOR FOLDING.
2. CAREFULLY BEND THE WALLS, FLOOR AND CEILING INWARD TO CREATE A BOX. **DO NOT OVERBEND THEM!**
3. BEND AND GLUE THE LEFT AND RIGHT WING TABS UNDER THE FLOOR. USE A POPSICLE STICK OR SIMILAR TOOL TO CAREFULLY APPLY PRESSURE ON THE FLOOR OVER EACH WING TO SET THE GLUE.
4. FLIP THE ROOM OVER AND GLUE THE LEFT AND RIGHT WING TABS OVER THE TOP OF THE CEILING.
5. BEND THE TABS LABELLED "GLUE TO WALL" AT A RIGHT ANGLE OUT OF THE ROOM. SET THE ROOM ASIDE TO DRY.
6. ASSEMBLE THE UPPER FLOOR ROOM CONTAINING THE VATS IN A SIMILAR MANNER.
7. THE THIRD ROOM IS A BIT MORE COMPLEX SINCE IT HAS FOUR WALLS. ASSEMBLE IT USING THE SAME STEPS AS ABOVE. ONCE YOU HAVE GLUED THE LEFT AND RIGHT WING TABS, WRAP THE TABS LABELLED "GLUE" AROUND THE FOURTH WALL. GLUE THE LAST TAB OVER THE CEILING.
8. CHECK ALL GLUE JOINTS TO MAKE SURE THEY ARE SOLID BEFORE PROCEEDING. TEST FIT THE ROOMS USING THE WINDOWS TO CONFIRM PLACEMENT. IF YOU HAVE ASSEMBLED YOUR BUILDING ACCORDING TO THE MANUFACTURER'S INSTRUCTIONS THEY SHOULD FIT EASILY. IF YOU FIND THEY FIT TOO TIGHT VERTICALLY YOU CAN REMOVE SOME OF THE WALL-MOUNT TAB MATERIAL WITH SCISSORS FOR ADDITIONAL CLEARANCE.
9. TO PREVENT LIGHT LEAKAGE, SPREAD A BIT OF GLUE INTO THE PERFORATED SEAMS ON THE CORNERS OF THE ROOM FROM THE OUTSIDE. THIS WILL ALSO MAKE THE JOINTS STRONGER.
10. USE YOUR KNIFE TO REMOVE THE CEILING PLUGS AND INSTALL PROVIDED LEDS, FASTENING THEM IN PLACE WITH GOOD QUALITY TAPE OR GLUE.
11. STARTING WITH THE UPPER FLOORS GLUE THE ROOMS TO THE WALL, BEING CAREFUL NOT TO GET GLUE ON YOUR CLEAR WINDOW MATERIAL.
12. GLUE THE SIGNS ONTO THE OUTSIDE OF THE BUILDING.
13. PLUG THE LED HARNESS INTO YOUR WOODLAND SCENICS® JUST PLUG® OR NCE ILLUMINATOR MODULE. SIT BACK AND ENJOY YOUR EFFORTS!

THIS IS NOT A TOY.
NOT SUITABLE FOR CHILDREN
UNDER 14 YEARS OF AGE.

DPM® LANDMARK STRUCTURES® HO SCALE BUILDING KIT



CUTTING'S SCISSOR CO. #10300

INSTRUCTIONS

Follow the enclosed HO scale General Instructions for #100 and #200 series kits. The General Instructions will refer to the drawings and instructions included with this kit. Read through all instructions before beginning construction on your kit.

Chimney Back: Sand bottom edge of Chimney Back (103-8) flat. Sand smooth side of Chimney Back and molded-in Chimney front so they fit flush. Glue together and let dry. When dry, sand top of Chimney flat.

Overhang Roof: Cut two Overhang Roofs from Roof Material (white styrene). Cut first Overhang Roof (103-9) 3 1/4" x 1" and second (not shown) 4 3/4" x 1". Attach (103-9) as illustrated and second above loading dock doors on Back Wall (103-3). Position and glue with slight downward pitch and place high enough for vehicles and rolling stock to clear.

Roof Support Ledge

Note that Top Left Wall (103-5) has a molded-in ledge that serves as a Roof Support for Bottom Roof (103-6).


ANWEISUNGEN

Folgen Sie der beigefügten allgemeinen Bauanweisungen für HO-Bausätze der Serie #100 sowie #200. Diese allgemeine Bauanweisungen bezieht sich sowohl auf die Montagezeichnung sowie auf die Montageanweisungen, die dem Bausatz beiliegt. Lesen Sie bitte sorgfältig alle zugehörigen Anweisungen vor dem Zusammenbau Ihres Bausatzes gut durch.

Schornsteinrückwand: Glätten Sie mit Schmiergelpapier die Unterseite der Schornsteinrückwand (103-8) ab. Glätten Sie ebenfalls die ebenen (glatten) Seitenteile der Schornsteinrückwand sowie der eingegossenen Schornsteinvorderseiten ab damit sie bündig zusammenpassen. Zusammenkleben und Abbinden lassen. Nach dem Abbinden glätten Sie die Oberkante der Schornsteine ab.

Überhangdach: Schneiden Sie zwei Überhangdächer aus Dachmaterial (weißes Styrol). Schneiden Sie das erste Überhangdach (103-9) 8.25 cm x 2.54 cm und das zweite (nicht gezeigt) 12 cm x 2.54 cm. Befestigen Sie (103-9) wie abgebildet und an zweiter Stelle über den Ladedocktüren an der Rückwand (103-3). Positionieren und kleben Sie mit einer leichten Neigung nach unten und platzieren Sie sie hoch genug, damit Fahrzeuge und Fahrzeuge frei werden.

Dachstütze Eingeformte: Beachten Sie, dass die obere linke Wand (103-5) eine eingeformte Kante hat, die als Dachstütze für das untere Dach (103-6) dient.

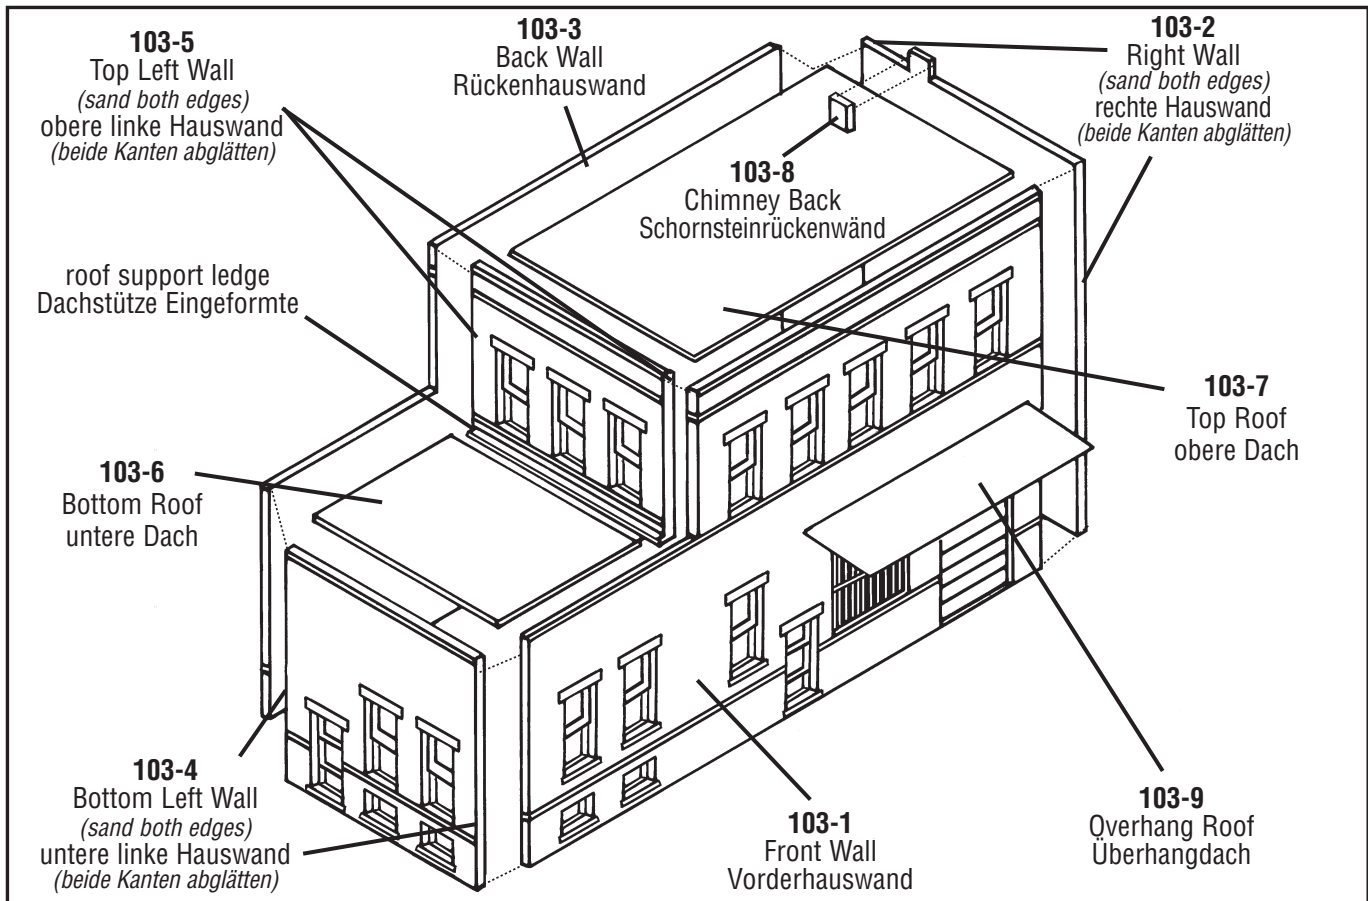

Create interest on your layout. Add lights to your buildings quickly and easily using the Woodland Scenics® Just Plug® Lighting System. Bereichern Sie Ihre Anlage: Mit dem Woodland Scenics Just Plug Beleuchtungssystem lassen sich Gebäude schnell und einfach beleben.

CAUTION: Cutting tools recommended. Use with care. / **ACHTUNG:** Schneidwerkzeuge empfohlen. Mit Vorsicht benutzen.

MODELING AND CARE INFORMATION This kit suggests the use of materials that may stain or cause damage. Take care to cover project area and clothing appropriately. Follow recommendations for use and cleanup.

Model making product. Not a toy! Not suitable for children under 14 years! / Produit pour le modélisme. Pas un jouet! Pas adapté aux enfants de moins de 14 ans! / Producto para modelismo. No es un juguete! No adecuado para niños menores de 14 años! / Modellbauartikel. Kein Spielzeug! Nicht geeignet für Kinder unter 14!